



# Acer Aspire R7 RAM Replacement

This is a commonly upgraded component which enhances your computer's ability to handle multiple tasks simultaneously.

Written By: Andrew Rodiek





## TOOLS:


- [T7 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Cover



- Shut down the laptop and disconnect the power cord
- ⚠ Failing to disconnect or shut down the laptop could result in damage to the laptop or a shock hazard.
- Turn the laptop over

## Step 2

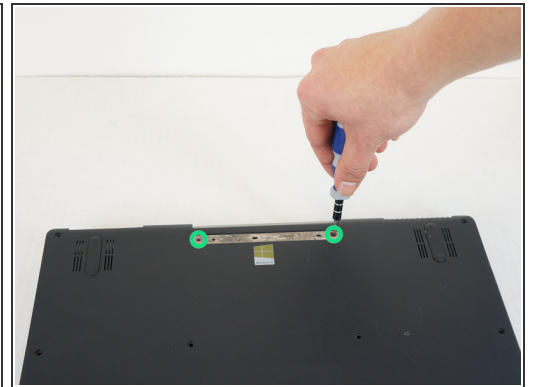

- Remove the (6) visible 10mm T-7 screws
- Remove the (4) visible 6mm T-7 screws
- Use the blue plastic opening tool to carefully remove the rubber pad which covers the two remaining screws
- Remove the remaining (2) 10mm T-7 screws



## Step 3



- Carefully lift the cover upwards
- ⓘ If the cover seems stuck use a spudger tool to pry the sides

## Step 4 — RAM



- Locate the RAM retaining clips
- Push clips away from the RAM module, allowing the spring loaded hinge to pop up

## Step 5



- Carefully pull the RAM module away from the motherboard

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-11 10:49:51 AM.